


The Wally Dolly

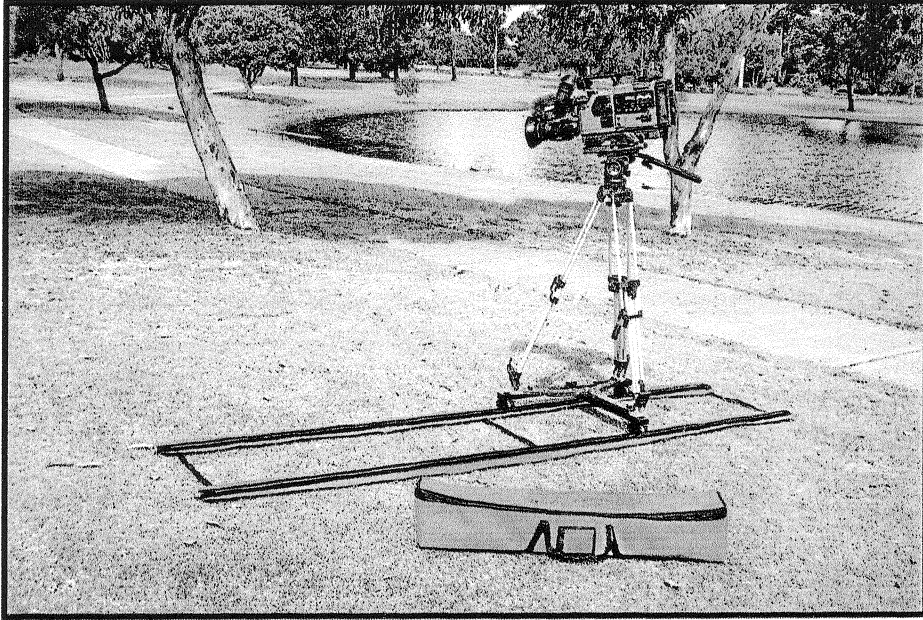

*Designed By A Cameraman
For
Cameramen*

*Made In Australia
By
Wally Dolly Australia Pty Ltd*

WALLY DOLLY

The "Wally Dolly" comes in a kit bag with the two components of the Dolly held together horizontally via a thumbscrew. To assemble the "Wally Dolly" the thumbscrew is unscrewed completely and the shorter section removed. The open end of the shorter section is then placed onto the tongue of the longer section and the thumbscrew inserted into the hole and tightened to hold the two sections together in a "T" shape.

The "Wally Dolly" dimensions when assembled are 780mm x 580mm and when dismantled for storage, a compact 150mm x 780mm.

TRACK SYSTEM

The track system for the "Wally Dolly" is made up of six 1 metre anodised aluminium pipes. Each pipe connects together by threaded plugs at either end. Carefully screw together three pipes to form one side of the track and the other three pipes to form the other side, thus making a 3 metre track system.

The track is then placed on the pads provided, which protect the track from being damaged when laid on the ground, absorb any track noise and help to act as a cushion over rough surfaces. The track is easily located in the centre of the pads and secured at both ends by the elastic tie downs. Included in the kit are two polyurethane end stops, which are placed at either end of the track preventing the dolly from rolling off.

NB. The track should be placed on flat even ground with the joints being supported at all times. The track has NOT been designed for use while suspended above the ground. When repositioning the Track System it MUST ALWAYS be disassembled prior to moving and NEVER CARRIED while the Track sections are still connected.

WARNING: Make sure the dolly is setup in a way that will not cause passersby or crew members to trip on the dolly and/or suffer injuries.

RATCHET TIE DOWN

Provided in the kit is a ratchet tie down which is used to secure your tripod to the “Wally Dolly” by fastening one end of the tie down to a central point of the tripod and the other end to the two holes in the centre of the “Wally Dolly”. Ensure the ratchet is firmly in place so that the tripod can't be lifted off the dolly.

WARNING: Make sure the ratchet is secure to prevent the tripod from being knocked off the dolly. Note that the dolly wheels are not attached to the track; if the dolly or tripod is knocked, bumped or walked into, it will topple off the track. We recommend that a camera mounted on the Wally Dolly always be manned by a crew member.

ACCESSORIES

The “Wally Dolly” comes in a carry bag made of water resistant Cordura ® and has an industrial grade zip and heavy duty carry straps. The bag is padded and has velcro straps to hold all equipment in place for protection while in transit.

A cleaning cloth is supplied to keep the “Wally Dolly” and track system free of dirt. The track system must be kept free of dirt to ensure the smooth operation of the dolly.

OPTIONAL EXTRAS

TRACK EXTENSIONS

Track and pad extensions are available in 1 metre increments. The 1 metre pads simply attach to the standard 3 metre pads via black velcro tabs which are provided with the extension set.


Ask your dealer for cost information.

LOW BOY CAMERA MOUNT


The “Wally Dolly Low Boy Camera Mount” is ideal for obtaining low to ground shots. It is attached to the “Wally Dolly” and enables the camera to be placed directly onto the dolly without the use of the tripod. Ask your dealer for cost information.

WALLY DOLLY LOW-BOY CAMERA MOUNT


The Wally Dolly Low-boy Camera Mount is easily attached to the Wally Dolly by placing it diagonally across the "T" section of the dolly with the tabs positioned over the edges of the dolly. (see diag 1.)

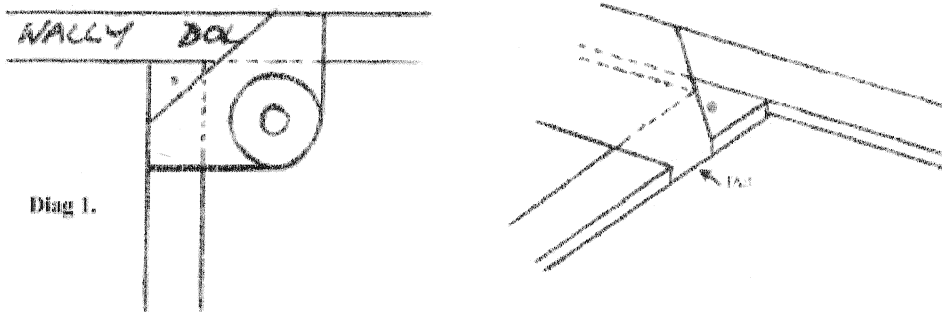

The Low-boy is secured to the dolly via the thumbscrew and washer to the underside of the dolly (see diag 2.) Ensure the thumbscrew is tight.

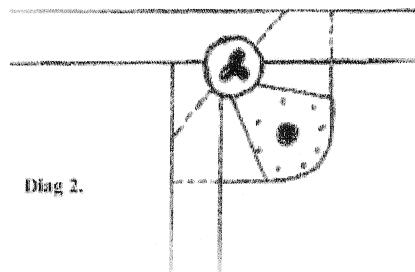

Remove your pan & tilt head from your tripod and then place it onto the Low-boy (see diag 3.)

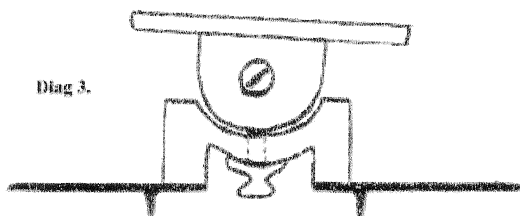

The Low-boy can be placed on the left or right side of the dolly as preferred.

MAINTENANCE

KIT BAG & TRACK PADS

Your Wally Dolly has been manufactured using Cordura ® outdoor fabrics. To obtain the maximum life from your product the following points should be noted:

1. Keep the fabric clean by brushing regularly, both inside and outside with a soft brush and by washing occasionally mild detergent and water. Starting at the lower edge of the fabric working upwards.
2. Do not use chlorine or bleach based cleaners, cleaning fluids or insecticides.
3. Keep petrol, oil, solvents, kerosene and other similar fluids away from the fabric.
4. Do not allow bird droppings, earth, sand or vegetable matter to remain in contact with the fabric. Remove as soon as possible.
5. Ensure that the fabric is thoroughly dry before stowing away.
6. Should mildew spots appear, brush them off before they become attached.

MAINTENANCE

WALLY DOLLY

Very low maintenance of the Wally Dolly is necessary. An occasional wiping of the dolly with the cloth provided is all that is required.

WHEELS

If the wheels become stiff and do not rotate freely, remove the wheels using the allen key provided with the kit and a 13mm spanner. Check the bearings and if damaged then replacements are available from your local supplier or Wally Dolly Australia Pty Ltd.

TRACK

Keep the track free from dust and dirt by cleaning with the cloth provided. It is recommended to lubricate the track occasionally by applying a small amount of light machine oil (such as Singer Sewing Machine Oil) to a clean soft cloth and wipe over tracks. Then using another clean soft cloth wipe off the oil leaving a light film behind. DO NOT use a dry film lubricant such as CRC Dry Glide.

Regular checks of the male and female threaded end plugs should be carried out. If they are loose, or the track segments do not screw together correctly, then locate the centre socket head cap screw of the threaded end plug and using the allen key provided in the kit, turn it two full rotations anti-clockwise. This will loosen the plug so that it can be pressed back into the correct position. Once this has been done re-tighten the cap screw firmly in a clockwise direction.

If an end plug is found to be damaged, a replacement can be purchased from your local distributor or Wally Dolly Australia Pty Ltd.

WARRANTY

THE DISTRIBUTORS AND MAKERS OF "WALLY DOLLY" WARRANTS ITS PRODUCTS TO BE FREE OF DEFECTS IN MATERIAL OR WORKMANSHIP FOR A PERIOD OF 12 MONTHS FROM THE DATE OF PURCHASE. THIS WARRANTY APPLIES TO THE ORIGINAL OWNER ONLY. WARRANTY IS VOID IF PRODUCT IS MADE AVAILABLE FOR HIRE. WARRANTY DOES NOT COVER DAMAGE CAUSED BY ALTERATION, MISUSE, ABUSE OR USE CONTRARY TO "WALLY DOLLY" SPECIFICATIONS OR INSTRUCTIONS.

THE DISTRIBUTORS AND MAKERS OF "WALLY DOLLY" MAKES NO OTHER WARRANTY EXPRESSED OR IMPLIED. NOR SHALL THE DISTRIBUTORS AND MAKERS BE LIABLE OR IN ANY WAY RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL ECONOMIC OR PROPERTY DAMAGE